

*Instruction Book For  
Scenic Roller Projection  
Screen*



*The*  
**POWER** *In*  
**PRESENTATION PRODUCTS**



**DA-LITE SCREEN COMPANY, INC.**

3100 North Detroit Street  
Post Office Box 137  
Warsaw, Indiana 46581-0137  
Phone: 219/267-8101  
800-622-3737  
Fax: 219/267-7804  
[http:// www.da-lite.com](http://www.da-lite.com)  
e-mail: [info@da-lite.com](mailto:info@da-lite.com)

## PRE-INSTALLATION

1. Having decided on hooks, chains, cables or other mounting method, have mounting prepared before opening box. Do not mount screen against walls that might rub fabric.
2. Whatever mounting method is used, the center clamp should be mounted with a turnbuckle, so center hook, chain or cable is 4" shorter than the other two.

## INSTALLATION

1. Remove lid from shipping container, being careful not to permit lid or any tools to fall on screen.
2. Remove screen from box by lifting roller at the ends. During installation handle unit only by ends of roller and top header. Do not grasp around fabric—do not rest unit on fabric.
3. Remove wrapping paper and unwind ropes.
4. With the screen lying on the floor, install the three clamps on the reinforcement tape on the header as shown in illustration A. Clamp assembly is shown in Illustration B. Drop the oblong ring in the slots of the two outside clamps before inserting bolts. Drop the closed loop of the turnbuckle in the slot of the center clamp before inserting bolt. Each clamp uses 3 bolts and nuts. Do not tighten nuts any more than finger tight. Make sure the ends of clamps do not push into the fabric. Pulleys at each end of header must be in the vertical position, when hung for proper operation.
5. Adjust top header in fabric pocket to the 2-1/4" and 3-3/4" position shown on the drawing.
6. Hang the screen in place at 3 points only.

**CAUTION!** When this screen is shipped from the factory, there are 2-1/2 turns of rope around each end of the roller. Make certain that this is left unchanged to insure good operation.

**CAUTION!** Before Dropping fabric make certain ropes at end of bottom roller do not overlap. Overlapping of ropes will cause rope to work inward and thus damage the fabric.

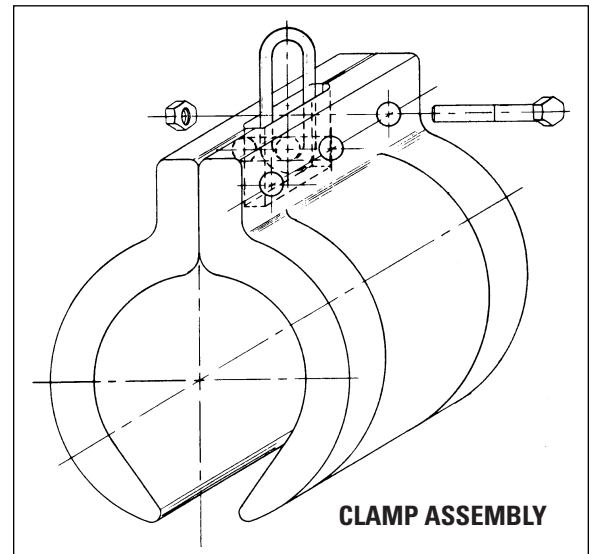


ILLUSTRATION B

## SCREEN ADJUSTMENT

1. Lower screen slowly by gradually releasing ropes.
2. With screen in the "Down" position, turn the header in the fabric pocket carefully to adjust the pulleys to a vertical end position. Check the 2-1/4" and 3-3/4" end tube dimensions. Adjust the three clamps on the reinforcement tape. Clamps are not to push into fabric pocket. Tighten nuts on all bolts.
3. Total screen drop may be controlled by adjusting rope clamp. Do not adjust for more drop.
4. With unit in completely unrolled position, examine the screen carefully. If slight sag appears in center of fabric, adjust turnbuckle at center eye bolt until fabric hangs flat.
5. Screen may be raised by pulling on ropes. Tie off ropes to keep screen in raised position.
6. Protect your screen against damage and it will give many years of enjoyment.
  - a. When lowering screen, do so gently. Never allow it to drop uncontrolled.
  - b. Before raising screen, be sure both front and back sides are free from insects or any foreign matter.
  - c. Form the habit of looking in space between fabric and roller for foreign matter before raising screen.
  - d. Caution stage hands and others to avoid bumping screen with ladders, scenery, etc.

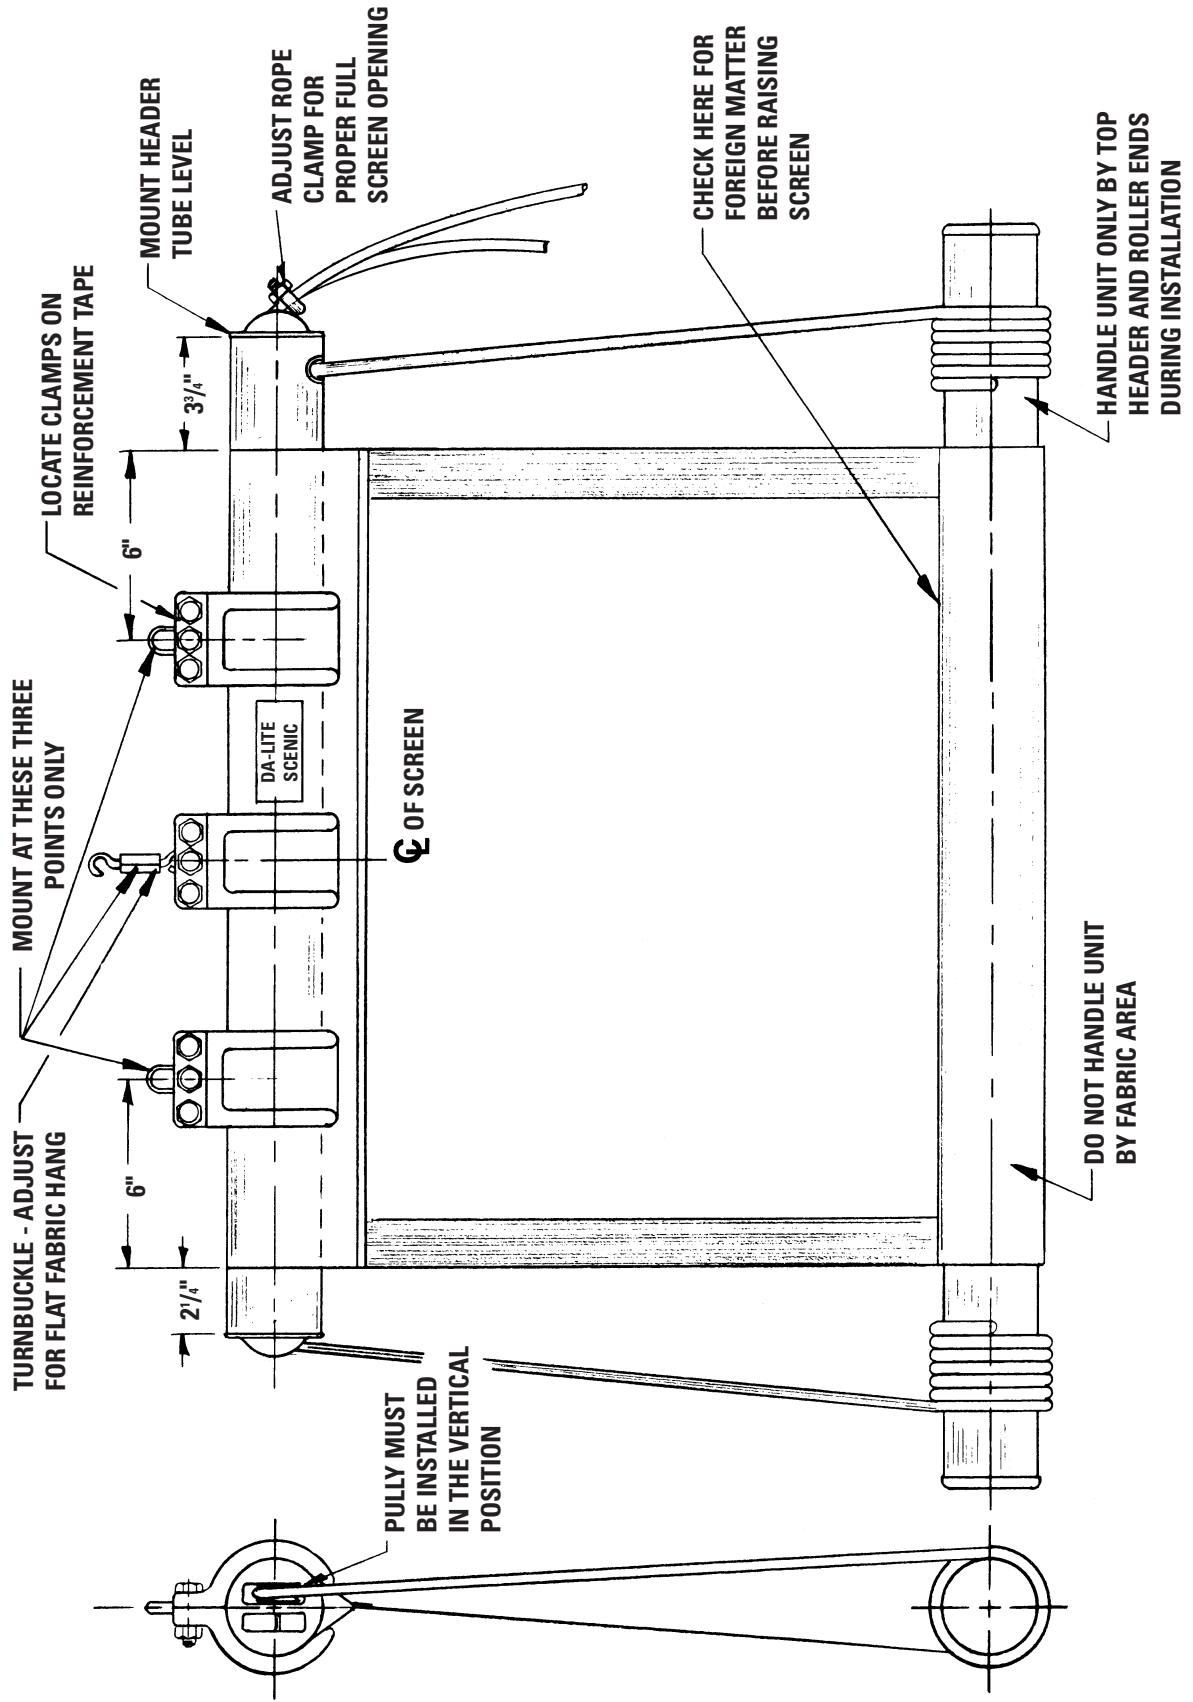


Illustration A

## **LIMITED ONE YEAR WARRANTY ON DA-LITE PROJECTION SCREENS**

Da-Lite Screen Company, Inc. warrants its screens to the original purchaser only, to be free from defects in materials and workmanship for a period of one (1) year from the date of purchase by the original purchaser provided they are properly operated according to Da-Lite's instructions and are not damaged due to improper handling or treatment after shipment from the factory.

This warranty does not apply to equipment showing evidence of misuse, abuse, or accidental damage, or which has been tampered with or repaired by person other than authorized Da-Lite personnel.

Da-Lite's sole obligation under this warranty shall be to repair or to replace (at Da-Lite's option) the defective part of the merchandise. Returns for service should be made to your Da-Lite dealer. If it is necessary for the dealer to return the screen or part to Da-Lite, transportation expenses to and from Da-Lite are payable by the purchaser and Da-Lite is not responsible for damage in shipment. To protect yourself against damage or loss in transit, insure the product and prepay all transportation expenses.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES AS TO FITNESS FOR USE AND MERCHANTABILITY. Any implied warranties of fitness for use, or merchantability, that may be mandated by statute or rule of law are limited to the one (1) year warranty period. This warranty gives you specific legal rights, and you may also have other rights which vary from state-to-state. NO LIABILITY IS ASSUMED FOR EXPENSES OR DAMAGES RESULTING FROM INTERRUPTION IN OPERATION OF EQUIPMENT, OR FOR INCIDENTAL, DIRECT, OR CONSEQUENTIAL DAMAGES OF ANY NATURE.

In the event that there is a defect in materials or workmanship of a Da-Lite Screen, you may contact our Customer Service Department at P.O. Box 137, Warsaw, Indiana 46581-0137 (219/267-8101) Toll Free (800/622-3737).

**IMPORTANT:** THIS WARRANTY SHALL NOT BE VALID AND DA-LITE SHALL NOT BE BOUND BY THIS WARRANTY IF THE PRODUCT IS NOT OPERATED IN ACCORDANCE WITH DA-LITE'S WRITTEN INSTRUCTIONS.

Keep your sales receipt to prove the date of purchase and your original ownership.